

dropcut & juicy



glow
6 in-one
trimmer

#madetoslay

User Manual

from
NU REPUBLIC
universe

smooth skin,
zero drama.



getting started

- charge the device for up to 2 hours before first use. provides up to 1 hour of operating time.

power on/off:

- press and hold the power button for 3-4 seconds to switch the trimmer on/off (fig. 1).

function control:

- while the trimmer is powered on, short press the power button to turn the trimming function on or off.

charging:

- close the power switch to off (fig.1)
- insert the charging plug into the charging socket (fig.2). the indicator light will flash while charging.



changing the attachments:

- the trimmer includes attachments for trimming, shaving, and exfoliating.
- the attachments can be changed easily. always switch off the device before changing attachments.

attachment removal/installation:

- rotate the attachment head clockwise until the arrows align, then lift the attachment
- away from the device (fig. 3).
- align the arrows on the new attachment with those on the device and place it onto the unit.
- rotate counterclockwise until it locks securely into position (figs. 4–6).



fig.3



fig.4



fig.5



fig.6

using the trimmer comb:

- the included trimming comb allows you to trim hair to a longer, even length.

to install the comb:

- ensure the trimmer attachment is fitted to the device.
- position the comb over the back of the trimmer head.
- press gently until it clicks into place (figs. 7–8).
- to remove the comb, gently pull it away from the trimmer attachment.



fig.7



fig.8

using the trimmer:

- remove the blade cap. click the power switch to the "on" position.
 - carefully place the trimmer blade on the desired area and trim as needed.
 - this attachment can be used for trimming ear hair, sideburns, eyebrow hair, and facial detailing.
1. if you experience any pain, irritation, or discomfort while using the discontinue use immediately.
 2. always clean the trimmer after use and replace the protective cap to prevent damage to the blade.

shaver for female:

- use this attachment to remove unwanted hair from the face, neck, arms, underarms, and legs

eyebrow trimmer:

- this attachment is designed for precise trimming of eyebrows, sideburns, and other small areas

switch on the device:

- hold the trimmer at an appropriate angle and gently guide it over the desired area.
- trim carefully for accurate shaping and detailing.
- facial trimmer & body shaver turn on the power switch.
- move the razor head against the direction of hair growth using smooth, straight, or circular motions.
- for best results, shave on clean, dry skin before or after bathing.
- turn off the device after use and clean the shaver head thoroughly.

use of trimmer:

using the trimming comb

the trimming comb allows you to trim hair to a uniform length.

note: trimming comb is not suitable for trimming hair shorter than 0.5 mm.

ensure the power switch is in the "off" position before attaching the comb.

attach the comb to the trimmer head (for eyebrow, beard, or hair trimming).

turn on the device.

move the trimmer against the direction of hair growth for an even trim.

nose hair trimming:



press the power button 2-3 Second to switch on the trimmer.



gently insert the outer blade tip into the nostril.



slowly rotate the trimmer in a circular motion around the inside of the nostril.



continue trimming until unwanted hair is removed, power button for 3-4 seconds to switch the trimmer off.

how to install hair remover head:



1. the facial hair remover head consists of 4 individual parts.



2. connect the two inner components together as shown in the illustration.



3. Insert the fixing holder /ring into place



4. align and position all components precisely. incorrect assembly will degrade product performance.



5. ensure the assembled inner components are positioned correctly in the center and rotate freely.



6. place the outer head assembly onto the main body and rotate clockwise until it is securely tightened.

important note:

always ensure all parts are assembled correctly before use.

improper installation may affect hair removal performance and product operation.

health & skin safety:

- use only for intended grooming purposes.
- do not use on irritated, infected, or broken skin.
- trim gently to avoid cuts, irritation, or discomfort.
- in case of redness, irritation, burning, or discomfort, discontinue use immediately.
- on sensitive skin areas (e.g., neck, underarms, private areas), limit continuous use to 2-3 minutes. switch off the device and allow the skin to rest for at least 1 minute before resuming. do not hold the trimmer stationary against the skin.
- if using the product for the first time or on sensitive skin, perform a small patch test before full use.
- for hygiene reasons, do not share the appliance.
- store the trimmer safely away from children and pets.

charging & battery safety:

- use only the supplied or compatible charging cable/adaptor.
- do not charge near water, heat, or flammable materials.
- unplug after charging and before cleaning.
- do not use if the device overheats, leaks, smells unusual, or appears damaged.
- charge and store the device between 10°C–35°C.

usage & care:

- handle blades carefully.
- clean blades and attachments after every use.
- ensure the device is switched off before cleaning.
- use only cold or lukewarm water for washable parts.
- do not use harsh chemicals, abrasives, or compressed air for cleaning.
- allow all parts to dry completely before storing.
- do not attempt to open, modify, or repair the device yourself.

storage & travel:

- store in a cool, dry place away from direct sunlight and humidity.
- avoid exposure to extreme heat, fire, or water beyond supported limits.
- switch off the device before packing during travel.
- use travel lock mode if available.

disposal:

- do not dispose of the product or battery with household waste.
- recycle responsibly through authorized e-waste collection center.

disclaimer:

to the maximum extent permitted under applicable law, the company shall not be liable for any damage or loss arising directly from:

- (a) misuse or use other than for the intended grooming purpose;
- (b) failure to follow the safety instructions set out in this user manual;
- (c) unauthorised modification, disassembly or repair of the device;
- (d) use of charging cables, adaptors or accessories not supplied with the product or is compatible with the product;
- (e) exposure to conditions outside the operating and storage parameters stated in this user manual.



no heat



no
dismantling



certified
cable only



recycle
properly

important safety information

the outer blade may become slightly warm during use. this is normal and will not affect product performance.

when using the nose trimmer for the first time, your nasal cavity may require a short adjustment period.

this attachment can also be used for trimming ear hair.

warning

* always switch on the device before bringing it into contact with nose or ear hair.

* do not insert the trimmer more than 1.25 cm (½ inch) into the nose or ear.

* keep the device out of reach of children.

* do not use the device on irritated, damaged, or inflamed skin.

dropcut & juicy

return, replacement & warranty policy

thank you for choosing dropcut & juicy.

we are committed to providing high-quality products and a great grooming experience. please read the following policy carefully.

returns & replacements

1. unused and unopened products may be returned within 48 hours of delivery.

2. opened products fall under the hygiene category and are non-returnable.

3. opened products are eligible for replacement or exchange only in case of a manufacturing defect or functional issue.

4. any defect must be reported within 48 hours of delivery.

5. an unboxing video is mandatory for all defect, damage, missing item, replacement, or exchange claims.

6. claims submitted without a valid unboxing video may not be accepted.

who pays for what

dropcut & juicy will cover all labour and material costs for repairs or replacements approved under warranty.

the customer is responsible for shipping or transporting the product to the designated service centre. any initial shipping or transportation charges shall be borne by the customer.

for warranty-approved repairs or replacements, dropcut & juicy will bear the return shipping charges.

warranty exclusions

this warranty does not cover defects or damage resulting from:

- * normal wear and tear
- * improper use, misuse, negligence, or abuse
- * failure to follow the instructions provided in the user manual
- * physical damage, accidental drops, impact, or breakage
- * exposure to liquids, moisture, humidity, sweat, beverages, or other foreign substances
- * unauthorized repairs, modifications, or tampering

warranty conditions

1. the warranty is valid only for the original purchaser.
2. a valid purchase invoice or proof of purchase is required for all warranty claims.
3. the warranty covers manufacturing defects and functional issues only.
4. products showing signs of misuse, abuse, accidental damage, unauthorized repair, modification, liquid damage, or improper handling are not covered under warranty.
5. any replacement product provided under warranty will carry the remaining warranty period of the original purchase.
6. defective products or parts replaced under warranty become the property of dropcut & juicy.

warranty coverage

dropcut & juicy provides a 1-year manufacturer warranty covering manufacturing defects and functional failures under normal usage conditions.

during the warranty period, eligible products may be repaired, replaced, or exchanged at the discretion of the company.

dropcut & juicy reserves the right to inspect the product and determine whether a warranty claim is valid.

how to claim warranty to initiate a warranty claim:

1. contact customer support:
email: hello@dropcutandjuicy.com
helpline: +91 88262 57630
2. share:
 - proof of purchase/invoice
 - product details
 - description of the issue
 - supporting images or videos (if requested)
3. if required, send the product along with its accessories and original invoice to the designated service centre for inspection.
4. upon approval, the product will be repaired, replaced, or exchanged at no additional cost.
5. if the same product is unavailable, dropcut & juicy may provide an equivalent product of similar value and functionality.

important notice

any warranty claim must be reported within the applicable warranty period.

claims submitted after the warranty period has expired will not be eligible for warranty service.

in the event that repair is not commercially viable due to spare part unavailability, product discontinuation, or other unforeseen circumstances, dropcut & juicy reserves the right to offer an alternative commercial resolution at its discretion.

limitation of liability

to the maximum extent permitted by applicable law, dropcut & juicy shall not be liable for any indirect, incidental, special, or consequential damages arising from the use or inability to use the product.

the company's total liability under this warranty shall not exceed the original purchase price of the product as stated on the customer's invoice.

Customer Care

Contact: +91 8826257630

Email : hello@dropcutandjuicy.com

Address : Nuworld Retail Pvt. Ltd. Plot No 17-18
Dwarka Sec-28 New Delhi 110077

E-waste Compliance:

Email : hello@dropcutandjuicy.com **or visit us at**
<https://www.dropcutandjuicy.com/pages/e-waste-management>

know more

scan the QR code below
and get ready to explore
a world of cool gears and
beyond!



working hours:
monday to friday
10:30 am – 5:30 pm

(except national and public holidays)

thank you for choosing dropcut & juicy.
we're here to keep your grooming game smooth, sharp, and hassle-free

dropcut & juicy